


Bruker veiledning nettverk



Hvordan koble et lokalt nettverk

Det er mange grunner til at man vill koble et lokalt nettverk som å for eksempel koble sammen printeren sin og pc-en. Får å følge denne Bruker veiledningen trenger du en Ethernet-kabel og 2 pc-er.


1. først må du koble kabelen inn i begge pc-ene.
2. Når begge pc-ene er kobla sammen må du åpne nettverks innstillinger. Dette gjør du ved å åpne kontrollpanel og trykker på «Network and internet»

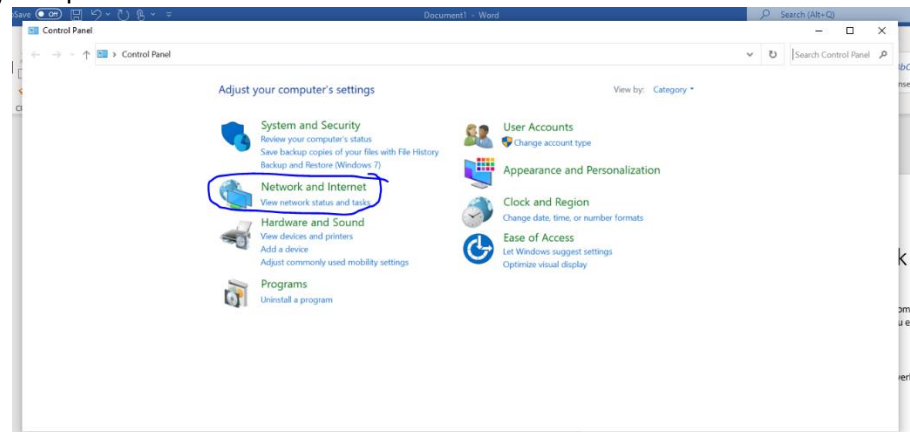



3. så trykker du på «Network and sharing ceenter»
4. Så trykker du «Change adapter settings»

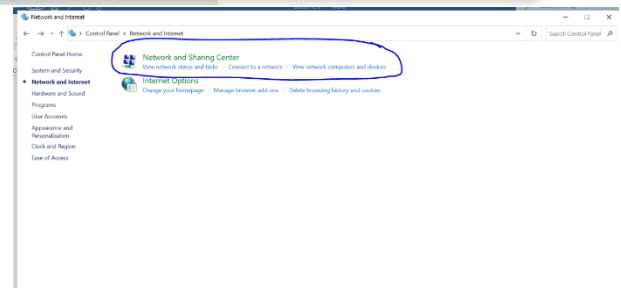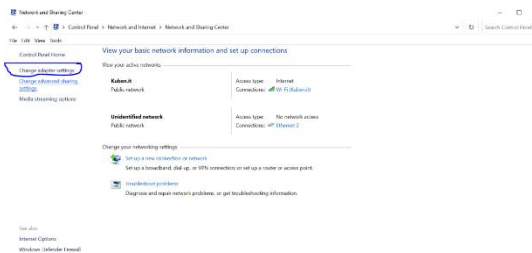

5. Så må du velge nettverks kortet som du har plugget inn kabelen. Så høyreklikker du på den og velger «Properties»

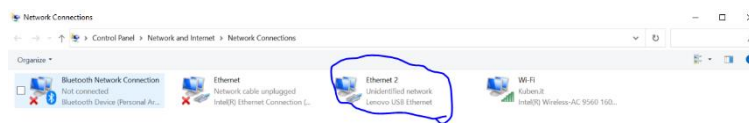

6. Så velger du «Internet protocol Version 4 (TCP/IPv4) og trykker «Properties»
7. Så fyller du inn boksene husk man kan ikke ha samme ipadresse på flere enheter.

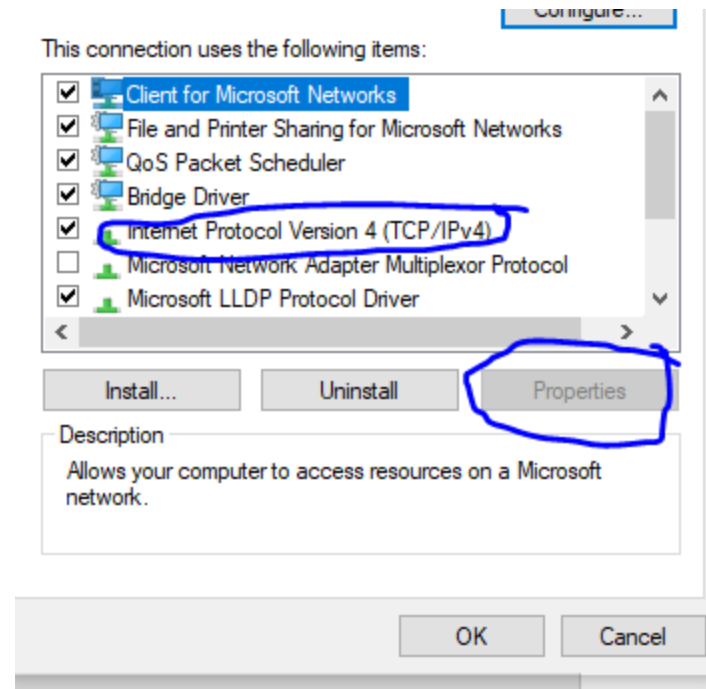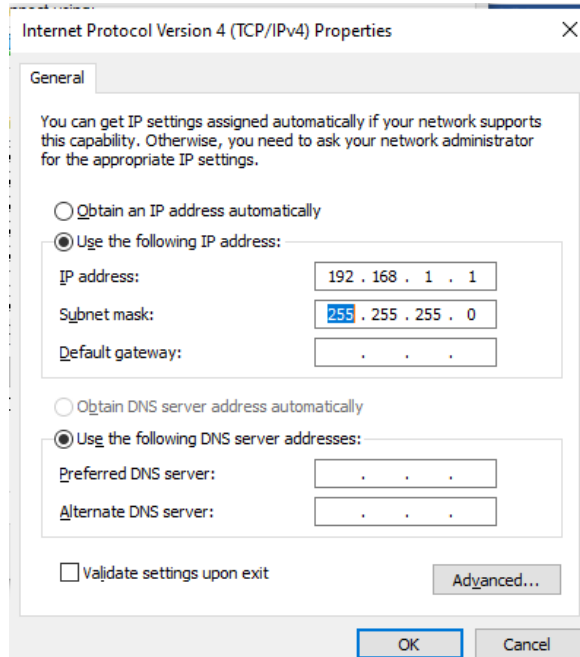

8. Nå kan du pinge den andre enheten får å teste med å skrive «ping (ipadressen til den andre enheten) »
Det er alt nå har du kobla opp et lokalt nettverk!

```
C:\Repos\about me>ping 192.168.1.1

Pinging 192.168.1.1 with 32 bytes of data:
Reply from 192.168.1.1: bytes=32 time<1ms TTL=128
Reply from 192.168.1.1: bytes=32 time<1ms TTL=128
Reply from 192.168.1.1: bytes=32 time<1ms TTL=128
Reply from 192.168.1.1: bytes=32 time<1ms TTL=128

Ping statistics for 192.168.1.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
```